


XIV Configuration list

| NO. | Name | Specification | Quantity | Remark |
|-----|------------------|----------------------------|----------|--------|
| 1 | Lamp head | LED-90W | 1 | |
| 2 | Lamp arm | — | 1 | |
| 3 | Central column | φ45x820mm | 1 | |
| 4 | Ceiling plate | Φ198x10mm | 1 | |
| 5 | Decorative cover | φ255x190mm | 1 | |
| 6 | Tool | 4# Hexagon socket wrench | 1 | |
| | | 2.5# Hexagon socket wrench | 1 | |
| 7 | Expansion screw | M12x120mm | 4 | |
| 8 | User manual | A5 | | |
| 9 | Certificate | — | | |

2025-02-20 version 1

KD-2012D-5 Operation Light

USER MANUAL

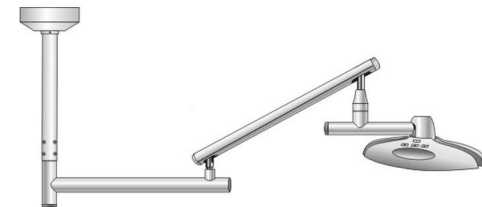

NANJING YANAN SPECIAL LIGHTING FACTORY

Content

| | |
|---|----|
| I Brief introduction..... | 1 |
| II Performance summary..... | 1 |
| III Main technical parameters..... | 1 |
| IV Security tips and symbol instructions..... | 2 |
| V Working environment..... | 2 |
| VI Product interface..... | 3 |
| VII Usage..... | 3 |
| VIII Attentions..... | 6 |
| IX Problem solution..... | 7 |
| X Bulb replacement..... | 8 |
| XI After-sales service and warranty..... | 8 |
| XII Transportation and storage condition..... | 8 |
| XIII Warranty card and maintenance card..... | 9 |
| XIV Configuration list..... | 10 |

XIII Warranty card and maintenance card

Warranty card

| | | | |
|---|--|------------------|--|
| Company name: | | | |
| Address | | Phone No. | |
| Product name | | Model | |
| Serial Number | | Manufacture date | |
| Sale date | | | |
| Fault description: | | | |
| Remark: The warranty of our products is 18 months since release date. Please keep the certificate and instruction properly, and send it back with the product when repairing. | | | |

(Please truthfully fill in this form, cut it according to the dotted line and send it back to our company, thank you for your cooperation)

Maintenance card

| | | | |
|--|--|------------------|--|
| Company name: | | | |
| Address | | Phone No. | |
| Product name | | Model | |
| Serial Number | | Manufacture date | |
| Sale date | | | |
| Fault description: | | | |
| Remark: You can enjoy 30% discount for the maintenance services even if you use this card over the quality assurance period. | | | |

X Bulb replacement

The bulb of the operation lamp is LED light source, normal life is up to 10000 hours, no need to replace normally. In case of any failure, please inform the manufacturer in time for processing.

XI After-sales service

- ◆ The product warranty period is 18 months
- ◆ During warranty period, send or give us your warranty card and purchase invoices, we will provide free maintenance service when you have quality problems.
- ◆ Light bulbs are consumable accessories.
- ◆ If you modified the function by yourself and then it does not work, is not covered under warranty.
- ◆ If the marks on the product such as model, serial number, date of manufacture has been altered, deleted, moved, or unidentifiable, will not provide free warranty service.
- ◆ Failure caused by human factors such as falling, squeezing, soaking and damp is not covered by the warranty
- ◆ The production date is shown on label, service life is 5 years, we provide lifetime maintenance.
- ◆ After-sales No.:+86-25-52777091 Telephone(WeChat):+86-13675197193

XII Transportation and storage condition

Environment temperature: -40℃~55℃

Relative humidity: 30%~80%

Atmospheric pressure: 500hpa~1060hpa

I Brief introduction

KD-2012L-5 operation lamp adopts brand LED bulbs as the light source, reflecting and concentrating light, and the brightness is adjustable in four levels. The lamp head rotates freely and provides multi-angle illumination. Ceiling-mounted installation doesn't take up much space.

This product is composed of lamp head, spring arm, central column, ceiling bracket and switching power supply.

The diameter of the lamp head of this product is 360mm, which is larger than the ordinary examination lamp head but smaller than the lamp panel of the shadowless lamp. Make up for small light spot, low illuminance and short lighting depth of the examination lamp. It is suitable for lighting in oral implants, medical aesthetics, pet medical care, teaching and various outpatient departments, etc.

II Performance summary

1. The product adopts a low-voltage output and cold lighting design and uses wide-voltage power supply system. Low-pressure energy-saving, stable performance, safe and reliable, and extremely long service life.
2. The lamp head and lamp arm of this product can rotate freely, providing multi-angle illumination. It is easy to install and operate.
3. The design and production of this product fully implement GB9706.1-2020 "Medical Electrical Apparatus - Part 1: Safety - General Requirements", which is guaranteed in safety.

III Main technical parameters

1. Rated voltage: AC100-240V, 50Hz/60Hz
2. Input power: ≤30VA
3. Product Specification: LED-90W
4. Product color temperature: 4800±300K
5. Lamp head diameter: 360mm
6. Working distance: 700mm

IV Security tips and symbol instructions

1. When the operation lamp is in use, to avoid the risks of fire, electric shock or personal injury, basic safety precautions should always be followed.
2. Please read the instructions carefully and follow the instructions.
3. The AC power supply for the operation lamp should be equipped with a switch and supplied through a leakage protection device.
4. The installation and commissioning of operation lamp must be carried out by professionals.
5. Before cleaning the operation lamp, turn off power and unplug, do not use liquid or spray cleaner.
6. Do not use the operation lamp near water.
7. When changing the bulb, you must first turn off the power switch and unplug the power cord. The old bulbs that have been replaced should be put in the waste bin and not discarded randomly.
8. Maintenance of the operation lamp must be operated by professional personnel. It is recommended that the operator wear an electrostatic ring to work.
9. The brightness of the operation lamp is very high. Caution should be exercised when using it for eye illumination. Do not observe with your eyes from the front when in use to avoid eye damage!
10. Illustration of symbols:



V Working environment

Environment temperature: -5°C ~40°C
 Relative humidity: 35%~75%
 Atmospheric pressure: 700hPa~1060hPa

7. Conduct a comprehensive inspection of nut, switch, brightness and noise of the operation lamp every quarter, timely repair and adjustment if any abnormality is found.
8. Bulbs are consumables and have a basic life span. The normal life of LED bulb is about 10000 hours. Pay attention to how long bulbs are used and prepare for them in advance.
9. Do not touch or press the lens of the light-emitting surface to prevent it from loosening or falling off due to pressing.
10. The service life of the operation lamp is five years. After the expiration, if it is scrapped, its metal, electronic components, plastic, glass and other materials should be uniformly and strictly treated in accordance with local environmental protection regulations to prevent their spread or reuse, minimizing the risk of environmental pollution.

IX Failure judgment and eliminate (This requires professional operation)

| Phenomena | Reason | Solution |
|--|--|---|
| Turn on the switch, but the lamp doesn't work. | 1. The network power switch is not on. | Turn on the network power switch to supply power to the lamp. |
| | 2. Power supply line is Disconnected. | Switch to a live supply line. |
| | 3. Switch③ is not turned on. | Press switch ③ to turn on the lamp. |
| | 4. The plug-in connection was not done properly. | Check the plugins in Picture 4-1 and Picture 5-1. |
| | 5. The power board is damaged. | Replace the power board with the same specification. |
| | 6. System line failure. | Contact the service department of our company. |

5)When the balance arm⑧ drifts due to being too loose or is difficult to rotate due to being too tight, you can use a 2.5mm Hexagon socket wrench to adjust the damping adjustment screw⑨ on the central column to make it neither too tight nor too loose, so that the horizontal arm can rotate easily without drifting.


6)When the lamp head cannot rotate due to being too tight or cannot be positioned due to too loose, you can use a 2.5mm Hexagon socket wrench to adjust the damping adjustment screw⑨ on the lamp head bracket to make it neither too tight nor too loose, so that the lamp head can rotate easily and be positioned properly.

7)When the work is done, press the lamp switch③ to turn off the lamp, then disconnect the AC power.

VIII Attentions

- 1.The surface of the operation lamp can be cleaned with a soft cloth or sponge. Do not use hard-bristled brushes, wire brushes, nor apply scouring powder, paint, banana water, acid, etc. to any surface.
- 2.When installing the operation lamp, please assemble and reinforce it in accordance with the technical requirements stated in the manual.
- 3.The surface of the operation lamp should be cleaned and disinfected after the operation. [Please unplug the AC power plug before cleaning and prevent liquid from seeping into the lamp.] The cleaning agent must be neutral household detergent and anti-static agent. Phenolic, iodide or pentanurone-based disinfectants must not be used.
- 4.The lens surface of the operation lamp should be frequently cleaned of dust with medical gauze or a soft brush to maintain the illuminance.
- 5.It is strictly prohibited to hang any items other than this equipment on the operation lamp body. Do not heavily pull or rotate the lamp head or lamp arm when in use.
- 6.Each month, use 75% alcohol cotton to remove dust on the surface of the operation lamp [Note: Please unplug the AC power plug before cleaning and prevent liquid from seeping into the lamp].

VI Product interface (Picture 1)

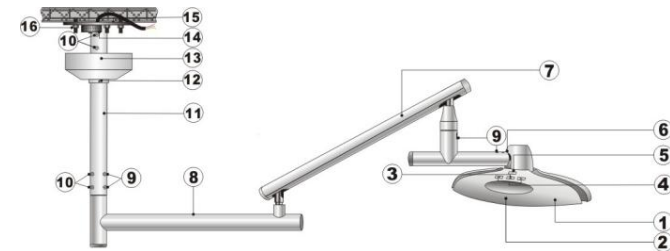


- ①Lamp head ②Handle ③Switch ④Brightness adjustment
- ⑤Brightness gear display ⑥rotating shaft ⑦Spring arm
- ⑧Horizontal arm ⑨Damping adjustment screw ⑩Fixing screw
- ⑪Central column ⑫decorative cover screw
- ⑬Decorative cover ⑭Switching power supply ⑮Ceiling plate
- ⑯Expansion screw

Picture 1

VII Usage

1. Check before use
 - 1)Unpack and check whether the product is damaged or missing parts
 - 2)According to the Configuration List, check whether the product model, name, quantity and accessories are consistent with the Configuration List. If any problem is found, please contact manufacturer in time.
 - 3)Read the instructions carefully and follow the installation steps.
- 2.Product installation
 - 1)Marking and drilling: According to the dimensions in Picture 2-1, mark at appropriate positions on the roof. [Note: The marking position should be at least 1600mm away from the surrounding walls as much as possible to ensure that the operation lamp can be rotated to any position.] Drill four embedded screw holes with a depth of 110mm each at the marked positions using a $\phi 16$ mm drill bit, as shown in Picture 2-2. After removing the debris, insert the M12*120mm expansion screw ⑯ and strike it with a hammer until it is fully inserted into the embedded


hole, as shown in Picture 2-3. And ensure that the end face of the expansion pipe is at the same horizontal level as the wall surface. Select an appropriate wrench to tighten the nut to ensure safety and accuracy, as shown in Picture 2-4.

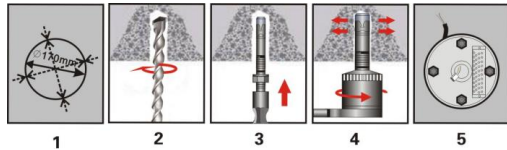

Picture 2

2) Ceiling plate installation: Remove the nuts and washers from the expansion screws, align the 4 $\phi 13$ holes of the ceiling plate¹⁵ with the 4 expansion screws¹⁶, install it on the roof, then tighten the nuts and expose the AC line outside the ceiling plate, as shown in Picture 2-5.

3) Central column installation: First, remove the two M6 screws on the connector between the ceiling plate and the middle column. Then, insert the decorative cover¹³ into the upper end of the central column¹¹ and pass the wire through the central column, as shown in Picture 3-1. Then connect the central column¹¹ to the ceiling plate¹⁵, install two M6 screws and tighten them, as shown in Picture 3-2.

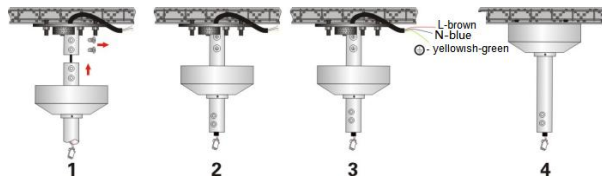

Picture 3

4) AC power connection: Before connecting the AC power supply, the user needs to confirm that the AC power supply is provided by installing a switch on the leakage protection device. Turn off the switch. Connect the brown wire, blue wire and yellowish-green wire to the L phase wire, N phase wire and ground wire respectively as shown in Picture 3-3, and wrap them firmly with insulating tape. Then push the decorative cover¹³ into place and tighten the decorative cover screws¹², as shown in Picture 3-4.



Picture 4

5) Spring arm and horizontal arm installation: Remove the two M6 screws on the rotating shaft of the horizontal arm⁸, firmly connect the connection plug between the central column and the horizontal arm, then connect the horizontal arm⁸ to the central column¹¹, install the two M6 screws and tighten them. See Picture 4-1、2.



Picture 5

6) Lamp head installation: Remove the fixing screws on the lamp head's rotating shaft, firmly connect the connection plugs of the lamp head and the spring arm⁷, then connect the lamp head to the spring arm⁷, install the fixing screws and tighten them. See Picture 5-1 and 2. The installation is completed.

3.Usage

- 1) Turn on the power switch, touch the switch³ on the lamp head¹, then the operation lamp will light up and start working.
- 2) The operation lamp has four levels of brightness adjustment. Pressing brightness adjustment⁴ can increase or decrease the brightness of the operation lamp.
- 3) By holding handle², you can adjust the height of the lamp head up and down. You can also rotate the lamp head left and right with the rotating shaft⁶ as the fulcrum. Additionally, you can use the connection between the lamp head and the lamp arm as the fulcrum to rotate the lamp head to change the lighting position and Angle.
- 4) By holding the handle², you can use the middle column¹¹ or the connection between the balance arm⁸ and the spring arm⁷ as the fulcrum to rotate the lamp arm to change the lighting Angle and position.